



# TM Printer Print Support Library Manual

## Overview

Descriptions of the TM Printer Print Support Library features.

## Installation

Descriptions of install.

## Using the Print Support Library

Descriptions of how to use the Print Support Library.

## **Cautions**

- No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation.
- The contents of this document are subject to change without notice. Please contact us for the latest information.
- While every precaution has been taken in the preparation of this document, Seiko Epson Corporation assumes no responsibility for errors or omissions.
- Neither is any liability assumed for damages resulting from the use of the information contained herein.
- Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.
- Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by Seiko Epson Corporation.

## **Trademarks**

EPSON® and ESC/POS® are registered trademarks of Seiko Epson Corporation in the U.S. and other countries.

Apple®, Mac®, Macintosh®, and Mac OS® are registered trademarks of Apple Inc.

Copyright © 2010-2013 Seiko Epson Corporation. All rights reserved.

# For Safety

## Key to Symbols

The symbols in this manual are identified by their level of importance, as defined below. Read the following carefully before handling the product.



Provides information that must be observed to avoid damage to your equipment or a malfunction.



Provides important information and useful tips.

## Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

# About this Manual

## Purpose of this manual

This manual has been created for the purpose of providing information necessary for use of the TM Printer Print Support Library.

## Manual Configuration

This manual is composed as follows:

Chapter 1      [Overview](#)

Chapter 2      [Installation](#)

Chapter 3      [Using the Print Support Library](#)

# Contents

|  |    |
|--|----|
| ■ For Safety .....   | 3  |
| Key to Symbols .....   | 3  |
| ■ Restriction of Use .....                                     | 3  |
| ■ About this Manual .....                                      | 4  |
| Purpose of this manual.....                                    | 4  |
| Manual Configuration.....                                      | 4  |
| ■ Contents .....   | 5  |
| <br>   |    |
| Overview .....   | 7  |
| ■ System Overview .....  | 7  |
| ■ Package Components.....                                      | 7  |
| ■ Operating Environment.....                                   | 7  |
| <br>   |    |
| Installation .....   | 9  |
| ■ Installing the Print Support Library .....                   | 9  |
| Installing .....   | 9  |
| <br>   |    |
| Using the Print Support Library .....                          | 13 |
| ■ Print Support Library API.....                               | 13 |
| API specification .....  | 13 |
| ■ Sample application.....                                      | 16 |
| Compile environment .....                                      | 16 |
| Compile procedure.....   | 16 |
| TMSDKSample screen.....  | 16 |
| ■ Sample source .....  | 18 |
| Sample data print.....   | 18 |
| Empty data print (When "Empty data is sent" is selected) ..... | 18 |



# Overview

This chapter describes the package components and operating environment of the TM Printer Print Support Library.

## System Overview

The TM Printer Print Support Library is a library for the purpose of supporting the print settings of the EPSON TM printer. By setting parameters for this library, print settings can be executed without displaying the print dialog.

## Package Components

TMPrintSupportLibrary\_xxx.pkg: TM Print Support Library Installer

## Operating Environment

Mac OS X 10.5.8

Mac OS X 10.6.8

Mac OS X 10.7.5

Mac OS X 10.8.2



# Installation

This chapter describes the procedures for installing the Print Support Library.



- This chapter shows the screens of Mac OS X 10.5. If you are using a different version of the Mac OS, proceed as appropriate for the screens in your version.
- To use this library to print, a TM driver must be installed and the printer must be registered.
- The following two models are supported by the library:
  - \* EPSON TM-T88V
  - \* EPSON TM-T20
  - \* EPSON TM-T82
  - \* EPSON TM-T82II
  - \* EPSON TM-T70II




To install the Print Support Library, the "Name" and "Password" of the administrator are required.

## Installing the Print Support Library


2

### Installing


- 1 Click "TMPrintSupportLibrary\_xxx.pkg" in the location where you saved it. Double-click "TMPrintSupportLibrary\_xxx.pkg" to start the installer.
- 2 The "Welcome to the TMPrintSupportLibrary\_xxx Installer" screen appears. Click the "Continue" button.

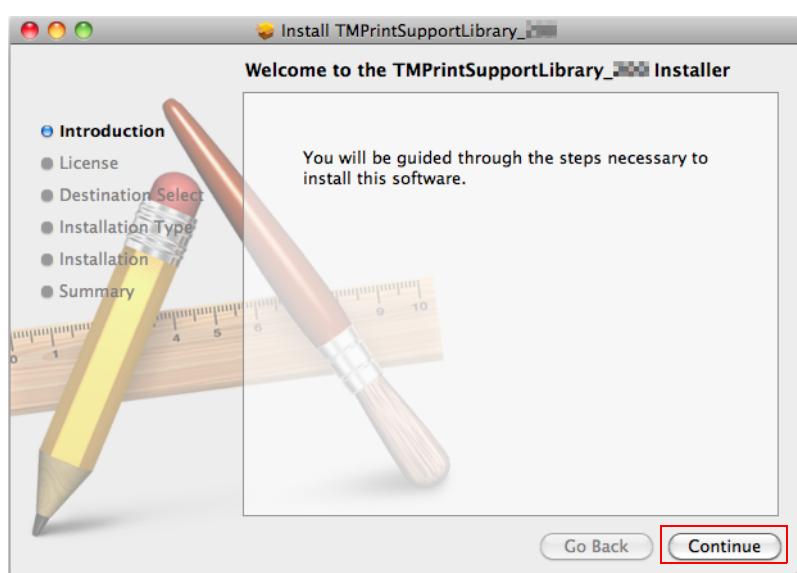


- 3** The "Software License Agreement" screen appears. Check the contents and click the "Continue" button.

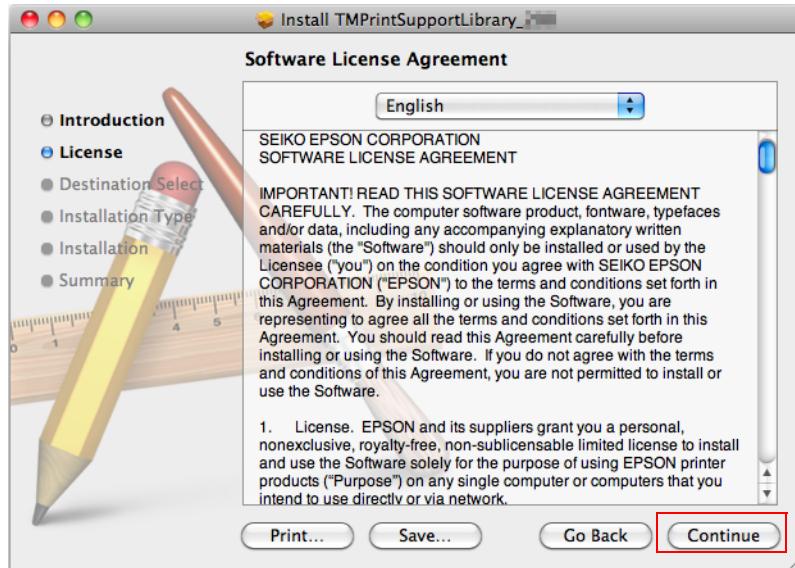


- 4** The license agreement confirmation message appears. Click the "Agree" button.

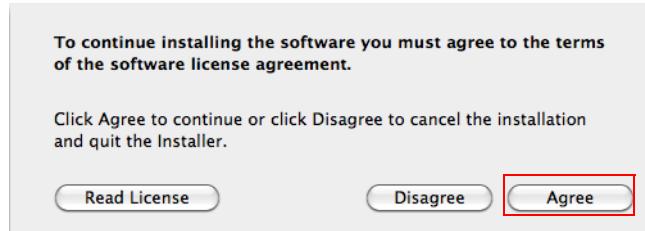


- 5** The "Select a Destination" screen appears. Click the "Continue" button.

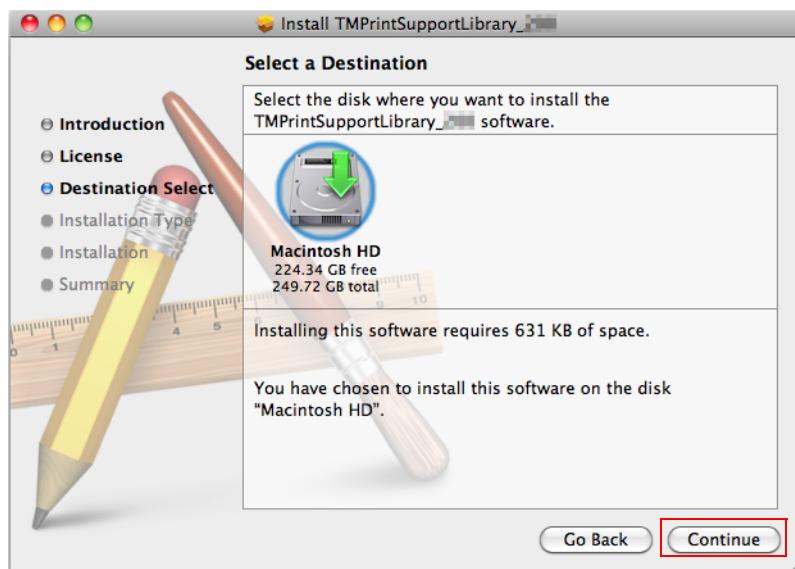

- 6 The "Custom Install on "Macintosh HD"" screen appears. Click the "Continue" button.

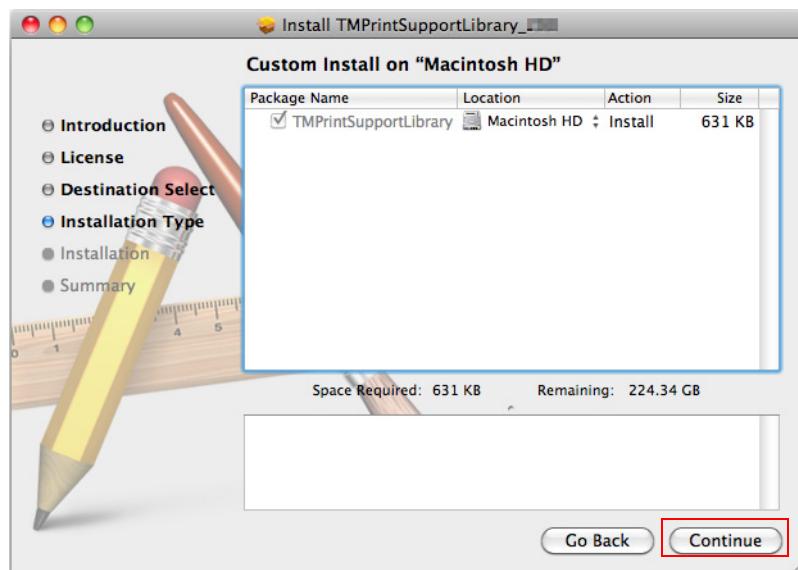


- 7 The "Standard Install on "Macintosh HD"" screen appears. Click the "Install" button.

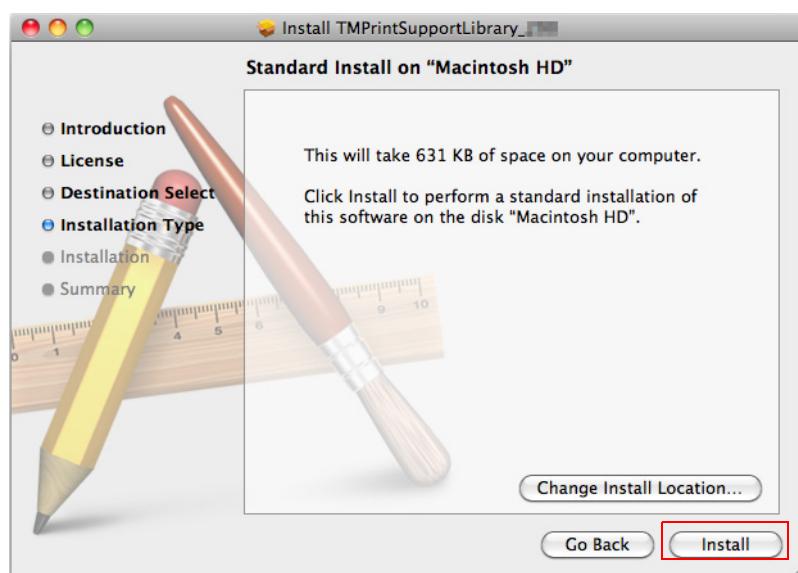

- 8 The OS administrator authentication screen appears. Enter a "Name" and "Password" and click the "OK" button.



- 9** The "The Installation was completed successfully." screen appears. Click the "Close" button.

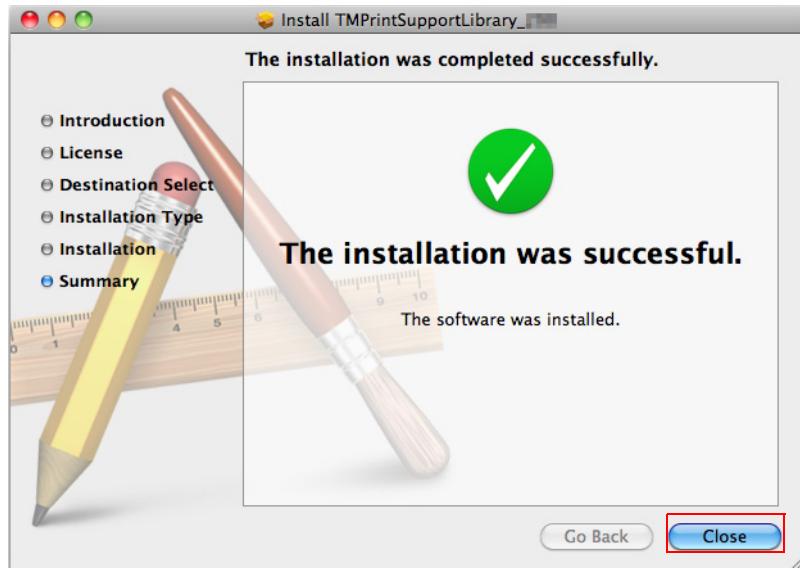

This completes the installation of the Print Support Library.

# Using the Print Support Library

This chapter explains how to use the Print Support Library.



This chapter shows the screens of Mac OS X 10.5.

If you are using a different version of the Mac OS, proceed as appropriate for the screens in your version.

To use the library, create the applications in the following configuration:

xxxxx/framework/TMPrintSupportLibrary.framework This library

xxxxx/yyyyyyyyy/zzzzz.xcodeproj Application's project

Bundle the library in the application. For the setting procedure, see the project settings in the sample application. A header file is bundled in the library.

`TMPrintSupportLibrary.framework/Versions/A/Headers/TMPrintSupport.h`

## Print Support Library API

### API specification

| Prototype  |
|--|
| <code>+ (OSStatus) TMSetJobTicket:(NSPrintInfo*)iPrinterInfo<br/>           PrinterName:(NSString*)iPrinterName<br/>           documentSize:(NSSize)iDocumentSize<br/>           resolution:(NSString*)iResolution<br/>           speed:(NSString*)iPrintSpeed<br/>           blank:(NSString*)iPageBlank<br/>           paperCut:(NSString*)iPaperCutType<br/>           chashDrwr1:(NSString*)iChashDrawer1<br/>           chashDrwr2:(NSString*)iChashDrawer2<br/>           buzzerControl:(NSString*)iBuzzerControl<br/>           buzzerPattern:(NSString*)iBuzzerPattern<br/>           buzzerRepeat:(NSString*)iBuzzerRepeat</code> |

### Description

Sets the information that is set in the parameters in printerInfo.

| <b>Arguments</b>      |   |
|-----------------------|---|
| <i>iPrinterInfo</i>   | Sets the printer information.   |
| <i>iPrinterName</i>   | Sets the printer name.  |
| <i>iDocumentSize</i>  | Sets the paper size<br><br>"TMTicketPageSize_0" = "RP80x297";<br>"TMTicketPageSize_1" = "RP58x297";   |
| <i>iResolution</i>    | Sets the resolution<br><br>"TMTicketResolution_1" = "180x180dpi";<br>"TMTicketResolution_2" = "203x203dpi";   |
| <i>iPrintSpeed</i>    | Sets the print speed.<br><br>"TMTicketPrintSpeed_1" = "Auto";<br>"TMTicketPrintSpeed_2" = "1";<br>"TMTicketPrintSpeed_3" = "2";<br>"TMTicketPrintSpeed_4" = "3";<br>"TMTicketPrintSpeed_5" = "4";   |
| <i>iPageBlank</i>     | Sets blank page saving.<br><br>"TMTicketBlankLineSkip_1" = "Off";<br>"TMTicketBlankLineSkip_2" = "Top";<br>"TMTicketBlankLineSkip_3" = "Bottom";<br>"TMTicketBlankLineSkip_4" = "Both";   |
| <i>iPaperCutType</i>  | Sets the page cutting type.<br><br>"TMTicketCutType_1" = "DocFeedCut";<br>"TMTicketCutType_2" = "DocFeedNoCut";<br>"TMTicketCutType_3" = "DocNoFeedCut";<br>"TMTicketCutType_4" = "DocNoFeedNoCut";<br>"TMTicketCutType_5" = "PageFeedCut";<br>"TMTicketCutType_6" = "PageFeedNoCut";<br>"TMTicketCutType_7" = "PageNoFeedCut"; |
| <i>iCashDrawer1</i>   | Specifies the open setting of the cash drawer 1 output destination.<br><br>"TMTicketCashDrawer1_1" = "Off";<br>"TMTicketCashDrawer1_2" = "Before";<br>"TMTicketCashDrawer1_3" = "After";  |
| <i>iCashDrawer2</i>   | Specifies the open setting of the cash drawer 2 output destination.<br><br>"TMTicketCashDrawer2_1" = "Off";<br>"TMTicketCashDrawer2_2" = "Before";<br>"TMTicketCashDrawer2_3" = "After";  |
| <i>iBuzzerControl</i> | Sets Buzzer Control.<br><br>"TMTicketBuzzerControl_1" = "Off";<br>"TMTicketBuzzerControl_2" = "Before";<br>"TMTicketBuzzerControl_3" = "After";   |

|                       |   |
|-----------------------|---|
| <i>iBuzzerPattern</i> | Sets Buzzer Pattern.  |
|                       | "TMTicketBuzzerPattern_1" = "Internal";<br>"TMTicketBuzzerPattern_2" = "A";<br>"TMTicketBuzzerPattern_3" = "B";<br>"TMTicketBuzzerPattern_4" = "C";<br>"TMTicketBuzzerPattern_5" = "D";<br>"TMTicketBuzzerPattern_6" = "E"; |
| <i>iBuzzerRepeat</i>  | Sets Buzzer Repeat.   |
| <b>Return</b>         |   |
| 0                     | Normal end  |
| -1                    | Printer information not correct (cannot find printer)   |
| -2                    | Invalid parameter value   |
| -3                    | Abnormal ticket information   |

|   |
|---|
| <b>Prototype</b>  |
| + (CFStringRef) TMSetEmptyData:(NSString*)iPrinterName                                  |
| <b>Description</b>  |
| Sends empty data to the printer<br>Use this when sending only the user definition file. |
| <b>Arguments</b>  |
| <i>iPrinterName</i> Sets the printer name (queue name).                                 |
| <b>Return</b>   |
| Error code  |

# Sample application

## Compile environment

- ❑ OS: 10.5.8
- ❑ Compiler: XCode3.1


## Compile procedure

Start the installed “TMSDKSample.xcodeproj” in the SampleSources folder using XCode.

To build the sample application, administrator authority is required.



## TMSDKSample screen

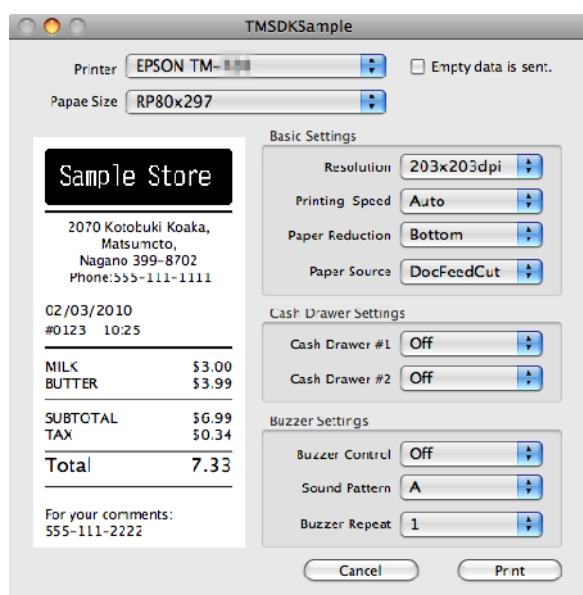

| Item      | Description                | Remarks   |
|-----------|----------------------------|---|
| Printer   | Displays the printer name. | Displays the TM printer list registered in the print and fax screen. When no printers are registered, the list is blank and only the (Cancel) button can be selected. |
| Page Size | Displays the paper size.   | -   |

| Item               | Description   | Remarks  |
|--------------------|---|--|
| Empty data is sent | Sends empty data.   | When it is ON, the buttons other than (Print) and (Cancel) cannot be selected. |
| Sample Data        | Displays sample data sent to the printer.                           | -  |
| Resolution         | Sets the resolution.  | -  |
| Printing Speed     | Sets the printing speed.  | -  |
| Paper Reduction    | Sets saving of blank parts of pages.                                | -  |
| Cash Drawer #1     | Specifies the open setting of the cash drawer 1 output destination. | -  |
| Cash Drawer #2     | Specifies the open setting of the cash drawer 2 output destination. | -  |
| Buzzer Control     | Sets the buzzer control.  | -  |
| Sound Pattern      | Sets the buzzer sound pattern.                                      | -  |
| Buzzer Repeat      | Sets the number of buzzer repeats.                                  | -  |
| Cancel             | Quits the application without printing.                             | -  |
| Print              | Starts printing.  | -  |

\* Immediately after startup, displays the default values of the Basic Settings, Cash Drawer Settings, and Buzzer Settings.

## Sample source

When the Print button of the TMSDKSample application is pressed, the following processing is performed.



In "xxx", specify the queue name of the environment you are using.

### Sample data print

```
OSStatus      err = noErr;
NSPrintInfo   *printInfo = [NSPrintInfo sharedPrintInfo];
NSView        *view;

err = [TMPrintSupport TMSetJobTicket:printInfo
                           printerName:@"xxx"
                           documentSize:NSMakeSize(204.0, 841.8)
                           resolution:@"180x180dpi"
                           speed:@"1"
                           blank: @"Off"
                           paperCut: @"DocFeedCut"
                           chashDrwr1: @"Before"
                           chashDrwr2: @"After"
                           buzzerControl: @"Off"
                           buzzerPattern: @"A"
                           buzzerRepeat: @"3"];
NSPrintOperation *printOperation =
    [NSPrintOperation printOperationWithView:view printInfo:printInfo];
[printOperation setCanSpawnSeparateThread:YES];
[printOperation setShowPanels:NO];
[printOperation runOperation];
```

### Empty data print (When “Empty data is sent” is selected)

```
OSStatus      err = noErr;
err = [TMPrintSupport TMSetEmptyData:@":xxx"];
```